



Originale		Sostituto		Originale		Sostituto	
	POWER		Power		MENU		Menu / Home
	INFO		Info / Angle		EXIT		Exit / Cancel / Clear
	MUTE		Mute / Dimmer		UP		Up
	1		1		LEFT		Left
	2		2		ENTER		OK
	3		3		RIGHT		Right
	4		4		VOL+		Vol+
	5		5		DOWN		Down
	6		6		CH+		CH+ / Page+
	7		7		VOL-		Vol-
	8		8		CH-		CH- / Page-
	9		9		LIST		Smart / List
	SOURCE		AV / Input / RDS		SLEEP		Sleep / Timer
	0		0		EPG		Guide / EPG / ---
	AUDIO		Audio / Lang / III		FAV		Fav / Marker / PC
	FORMAT		Picture / Format		<<		<< / Tune-
	BACK		Back / Return		RED		Red / Netflix / Search





Originale	Sostituto	Originale	Sostituto
	>>		>> / Tune+
	GREEN		Green / APP / Repeat
	I<<		I<< / Preset-
	YELLOW		Yellow / YouTube / Repeat
	BLUE		Blue / Prime Video / Random
	>>I		>>I / Preset+
	PLAY		Play / Slow
	PAUSE		Pause / Step / Freeze
	TEXT		Text / Goto
	STOP		Stop / Hold
	SUBTITLE		Subtitle / EQ
	RADIO		TV/Radio /
	OPT		Setup / OPT /
	DMP		Display / Media
	INDEX		D.Menu / Top
	REC		Rec / Rec Mode

