

 

 

 

 

 

 
 
 
 
 

 





 

 

 

 







Originale	Sostituto
 POWER	 Power
 INFO	 Info
 HDMI CONTROL	 Media
 SLEEP	 Sleep
 SCREEN	 Format
 SOURCE	 AV
 PRESETS	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 RETURN	 Back
 MENU	 Menu
 ZOOM/RED/▲	 Red
 REPEAT/GREEN/▼	 Green
 ROOT/YELLOW	 Shift + Yellow
 TITLE/BLUE	 Blue
 OK/SELECT	 Ok
 UP	 Up
 DOWN	 Down
 RIGHT	 Right
 LEFT	 Left
 P+	 Ch +
 P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 FAV	 Pre Ch
 LANG	 Dual





	Originale	Sostituto
	SUBTITLE	AD SUBT Subt
	MUTE	MUTE Mute
	SWAP/↔	CLEAR EXIT Exit
	EPG	-/-- GUIDE Guide
	-/--	SHIFT + -/-- GUIDE Shift + Guide
	TEXT	REPEAT TEXT Text
	C	C Yellow
	DISPLAY	SHIFT + DISPLAY INFO Shift + Info
	ANGLE	ECO 3D 3D
	SEARCH MODE	SEARCH TV/R TV/R
	REC	REC MODE Rec
	STOP	Stop
	PLAY	PLAY MODE Play
	PAUSE	Pause
	<<	<<
	>>	>>
	I<<	I<<

	Originale	Sostituto
	>>I	>>I

