




 

 



 



 

 

 
 
 

 



 
 


 








 
 
 

 

 


 




















 
 
 

Originale	Sostituto
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 Pre Ch
 CH List	 List
 EPG	 Guide
 3D	 3D
 Vol+	 Vol +

Originale	Sostituto
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Info	 Info
 Menu	 Menu
 Mute	 Mute
 Exit	 Exit
 Return	 Back
 Media	 Media
 Eco	 Shift + 3D
 FAV	 Shift + Pre Ch
 HiSmart@	 Smart
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Originale	Sostituto
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Subt.	 Subt
 Text/Mix	 Text
 P.Mode	 Shift + Format
 Language/I/II	 Dual
 S.Mode	 Shift + Dual
 Size	 Format
 T.Shift	 Sleep
 Still/Reveal	 Options
 Rec/PVR	 Rec
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 <</Hold	 <<

Originale	Sostituto
 >>/Index	 >>
 I<</Sub.Code	 I<<
 >>I/Cancel	 >>I

