





 








 



 
 
 




 









 
 
 

 

 

 
 
 

 

 

 

 
 

 
 

 
 
 
 









 


Originale	Sostituto
 Power	 Power
 OK	 OK
 Up	 UP
 Down	 DOWN
 Right	 RIGHT
 Left	 LEFT
 Return	 BACK
 Play	 Play
 Pause	 Pause
 Extra	 MEDIA
 Mute	 MUTE
 Vol+	 VOL +
 Vol-	 VOL -
 Guide	 -/-- / EPG
 CH+	 CH +
 CH-	 CH -
 Home	 VOD

Originale	Sostituto
 Source	 SRC
 TTX/MIX	 TEXT
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PRE-CH	 P/C / FAV
 Exit	 EXIT
 Info	 INFO
 Menu	 MENU
 Red	 Red (A)





Originale	Sostituto	Originale	Sostituto
Green	 B	Green (B)	
Yellow	 C	Yellow (C)	
Blue	 D	Blue (D)	
123	 TV/R	TV/R	
Tools	 OPT+	OPT+	
Stop	 Stop	Stop	
Rec	 Rec	Rec	
<</ <<	 Rewind	Rewind	
>>/>>	 Fast Forward	Fast Forward	
CH List	 WIDE	WIDE	
AD/Subt.	 Subt.	Subt.	
E-Manual	 Audio	Audio	

