



| Originale | Sostituto |
|--|--|
|  POWER |  Power |
|  INFO |  Info / Angle |
|  HDMI CONTROL |  Smart / List |
|  SLEEP |  Sleep / Timer |
|  SCREEN |  Picture / Format |
|  SOURCE |  AV / Input / RDS |
|  PRESETS |  Setup / OPT / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  ZOOM/RED/▲ |  Zoom / Size |
|  ZOOM/RED/▲ |  Shift + CH+ / |
|  ZOOM/RED/▲ |  Red / Netflix / Search |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  REPEAT/GREEN/▼ |  Shift + CH- / Page- |

| Originale | Sostituto |
|--|---|
|  REPEAT/GREEN/▼ |  Green / APP / Repeat |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  ROOT/YELLOW |  Yellow / YouTube / Repeat |
|  RETURN |  Back / Return |
|  0 |  0 |
|  MENU |  Menu / Home |
|  TITLE/BUE |  Sound / Title |
|  TITLE/BUE |  Blue / Prime Video / Random |
|  UP |  Up |
|  LEFT |  Left |
|  OK/SELECT |  OK |
|  RIGHT |  Right |
|  DOWN |  Down |
|  P+ |  CH+ / Page+ |
|  P- |  CH- / Page- |





| Originale | Sostituto |
|-------------|-------------------------|
| V- | Vol- |
| V+ | Vol+ |
| FAV | Fav / Marker / PC |
| LANG | Audio / Lang I/II |
| SUBTITLE | Subtitle / EQ |
| MUTE | Mute / Dimmer |
| SWAP/↔ | Shift + Back / Return |
| EPG | Guide / EPG / -/-- |
| [*] / [..] | D.Menu / Top |
| TEXT | Text / Goto |
| C | Exit / Cancel / Clear |
| DISPLAY | Display / Media |
| ANGLE | Shift + Info / Angle |
| SEARCH MODE | Shift + Red / Netflix / |
| REC | Rec / Rec Mode |
| STOP | Stop / Hold |
| PLAY | Play / Slow |

| Originale | Sostituto |
|-----------|-----------------------|
| PAUSE | Pause / Step / Freeze |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

