 

 





 




 





 



 


 
 

 

 

 



 
















 
 

 





 

 

 

 

 



 

 

 

 

 

 

 

 











Originale		Sostituto		Originale		Sostituto	
	Power		Power		[≡?]/Source		AV / Input / RDS
	Mute		Mute / Dimmer		Menu		Menu / Home
	[≡]/Text		Text / Goto		Up		Up
	Play		Play / Slow		Left		Left
	Pause		Pause / Step / Freeze		Enter		OK
	[≡+]		Shift + Stop /		Right		Right
	Stop/Still		Stop / Hold		Down		Down
	Radio		TV/Radio /		[≡i]/Info		Info / Angle
	Format		Picture / Format		Exit		Exit / Cancel / Clear
	<<		<< / Tune-		Vol+		Vol+
	Red		Red / Netflix / Search		Index		Setup / OPT /
	>>		>> / Tune+		CH+		CH+ / Page+
	Green		Green / APP / Repeat		Vol-		Vol-
	I<<		I<< / Preset-		List		Smart / List
	Yellow		Yellow / YouTube / Repeat		CH-		CH- / Page-
	>>I		>>I / Preset+		1		1
	Blue		Blue / Prime Video / Random		2		2





Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0))/Audio	 Audio / Lang I/II
 0	 0
 DVB	 Display / Media
 Fav ♥	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Back	 Back / Return
 [=x]	 D.Menu / Top
 [=o]/Subtitle	 Subtitle / EQ
 USB	 Shift + 8

Originale	Sostituto
 Rec	 Rec / Rec Mode

