

 



























 




























































 
 



 
| Originale  | Sostituto  |
|--|--|
|  Power          |  Power            |
|  123 / keypad   |  Eject / Surround |
|  Extra          |  D.Menu / Top     |
|  Up             |  Up               |
|  Left           |  Left             |
|  OK             |  OK               |
|  Right          |  Right            |
|  Down           |  Down             |
|  Return         |  Back / Return    |
|  Vol Up         |  Vol+             |
|  Home / Hub    |  Smart / List    |
|  CH Up        |  CH+ / Page+    |
|  Vol Down     |  Vol-           |
|  CH Down      |  CH- / Page-    |
|  Play / Pause |  Shift + Play / |
| Mute   |  Mute / Dimmer  |
| Play   |  Play / Slow    |

| Originale  | Sostituto   |
|------------|---|
| Pause      |  Pause / Step / Freeze |
| Stop       |  Stop / Hold           |
| Rec        |  Rec / Rec Mode        |
| <<         |  << / Tune-            |
| >>         |  >> / Tune+            |
| I<<        |  I<< / Preset-         |
| >>I        |  >>I / Preset+         |
| S.Mode     |  Sound / Title         |
| AD         |  Audio / Lang I/II     |
| AD / Subt. |  Subtitle / EQ         |
| Picture    |  Picture / Format     |
| P.Size     |  Zoom / Size         |
| Sleep      |  Sleep / Timer       |
| Auto Prog  |  TV/Radio /          |
| Tools      |  Setup / OPT /       |
| TTX/MIX    |  Text / Goto         |
| Source     |  AV / Input / RDS    |





| Originale | Sostituto   |                                   |
|-----------|---|-----------------------------------|
| Menu      |    | Menu / Home                       |
| Info      |    | Info / Angle                      |
| Exit      |    | Exit / Cancel / Clear             |
| CH List   |    | Display / Media                   |
| 1         |    | 1                                 |
| 2         |    | 2                                 |
| 3         |    | 3                                 |
| 4         |    | 4                                 |
| 5         |    | 5                                 |
| 6         |   | 6                                 |
| 7         |    | 7                                 |
| 8         |    | 8                                 |
| 9         |    | 9                                 |
| Guide     |    | Guide / EPG / -/--                |
| 0         |    | 0                                 |
| Fav CH    |    | Fav / Marker / PC                 |
| Search    |  +  | Shift + Yellow / YouTube / Repeat |

| Originale   | Sostituto   |                             |
|-------------|---|-----------------------------|
| Prime Video |  +      | Shift + Blue / Prime        |
| Rakuten Tv  |  +      | Shift + Green / APP /       |
| Netflix     |  +      | Shift + Red / Netflix /     |
| Still       |  +      | Shift + Pause / Step /      |
| Dual I-II   |  +      | Shift + Audio / Lang I/II   |
| Add / Del   |  +      | Shift + Eject / Surround    |
| TV / DTV    |  +      | Shift + TV/Radio / Program  |
| E-Manual    |  +      | Shift + OK                  |
| Media P.    |  +      | Shift + Display / Media     |
| -/--        |  +    | Shift + Guide / EPG / -/--  |
| PRE-CH      |  +  | Shift + Fav / Marker / PC   |
| Red         |    | Red / Netflix / Search      |
| Yellow      |    | Yellow / YouTube / Repeat   |
| Blue        |    | Blue / Prime Video / Random |
| Green       |    | Green / APP / Repeat        |

