

 



























 

 



















 

 

 

 

 

 

 

 



 





















 
















 



Originale	Sostituto
 Power	 Power
 123 / keypad	 Eject / Surround
 Extra	 D.Menu / Top
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Vol Up	 Vol+
 Home / Hub	 Smart / List
 CH Up	 CH+ / Page+
 Vol Down	 Vol-
 CH Down	 CH- / Page-
 Play / Pause	 Shift + Play /
 Mute	 Mute / Dimmer
 Play	 Play / Slow

Originale	Sostituto
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+
 S.Mode	 Sound / Title
 AD	 Audio / Lang I/II
 AD / Subt.	 Subtitle / EQ
 Picture	 Picture / Format
 P.Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Auto Prog	 TV/Radio /
 Tools	 Setup / OPT /
 TTX/MIX	 Text / Goto
 Source	 AV / Input / RDS





Originale	Sostituto	
Menu		Menu / Home
Info		Info / Angle
Exit		Exit / Cancel / Clear
CH List		Display / Media
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide		Guide / EPG / -/--
0		0
Fav CH		Fav / Marker / PC
Search	 + 	Shift + Yellow / YouTube / Repeat

Originale	Sostituto	
Prime Video	 + 	Shift + Blue / Prime
Rakuten Tv	 + 	Shift + Green / APP /
Netflix	 + 	Shift + Red / Netflix /
Still	 + 	Shift + Pause / Step /
Dual I-II	 + 	Shift + Audio / Lang I/II
Add / Del	 + 	Shift + Eject / Surround
TV / DTV	 + 	Shift + TV/Radio / Program
E-Manual	 + 	Shift + OK
Media P.	 + 	Shift + Display / Media
-/--	 + 	Shift + Guide / EPG / -/--
PRE-CH	 + 	Shift + Fav / Marker / PC
Red		Red / Netflix / Search
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Green		Green / APP / Repeat

