 



 









 















 









 



 







 



 















| Originale | | Sostituto | | Originale | | Sostituto | |
|---|-----------------|---|-----------------------|---|---------|---|-----------------------|
|  | Power |  | Power |  | Text |  | Text / Goto |
|  | Mute |  | Mute / Dimmer |  | Source |  | AV / Input / RDS |
|  | Play/Pause/Hold |  | Play / Slow |  | Menu |  | Menu / Home |
|  | Pause |  | Pause / Step / Freeze |  | Up |  | Up |
|  | Stop/Size |  | Stop / Hold |  | ?? |  | Info / Angle |
|  | Rec Menu |  | Rec / Rec Mode |  | Left |  | Left |
|  | << |  | << / Tune- |  | OK |  | OK |
|  | >> / Cancel |  | >> / Tune+ |  | Right |  | Right |
|  | I<< / Index |  | I<< / Preset- |  | Exit |  | Exit / Cancel / Clear |
|  | >>I/Reveal |  | >>I / Preset+ |  | Down |  | Down |
|  | Nicam |  | Audio / Lang I/II |  | Back |  | Back / Return |
|  | Subtitle |  | Subtitle / EQ |  | Vol+ |  | Vol+ |
|  | Aspect |  | Picture / Format |  | List |  | Smart / List |
|  | Sleep |  | Sleep / Timer |  | CH+ |  | CH+ / Page+ |
|  | Tv |  | TV/Radio / |  | Vol- |  | Vol- |
|  | Subpage |  | D.Menu / Top |  | Display |  | Display / Media |
|  | PC Auto |  | Setup / OPT / |  | CH- |  | CH- / Page- |





| Originale | Sostituto |
|-----------|----------------------------------|
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | Guide / EPG / -/-- |
| | 0 |
| | Fav / Marker / PC |
| | Red / Netflix / Search |
| | Green / APP / Repeat |
| | Yellow / YouTube / Repeat |
| | Blue / Prime Video / Random |
| | + Shift + Pause / Step / Freeze |

| Originale | Sostituto |
|-----------|--------------------------------------|
| | + Shift + TV/Radio / Program |
| | + Shift + Display / Media |
| | + Shift + Guide / EPG / -/-- |
| | + Shift + Green / APP / Repeat |
| | + Shift + Yellow / YouTube / Repeat |

