










 

 

 









 





 






Originale	Sostituto	Originale	Sostituto
	Power		Power
	Source		SRC
	HDMI		MEDIA
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		TEXT
	PRE-CH		P/C / FAV
	Mute		MUTE
	CH List		TV/R

Originale	Sostituto	Originale	Sostituto
	Smart Hub		VOD
	Vol+		VOL +
	Vol-		VOL -
	P+		CH +
	P-		CH -
	Guide		-/-- / EPG
	Menu		MENU
	Tools		OPT+
	Info		INFO
	Up		UP
	Enter		OK
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Return		BACK
	Exit		EXIT
	Red		Red (A)





Originale	Sostituto	Originale	Sostituto
 Green	 Green (B)		
 Yellow	 Yellow (C)		
 Blue	 Blue (D)		
 Search	 Audio		
 P.Size	 V-FOR		
 Status	 WIDE		
 AD/Subt.	 Subt.		
 E-Manual	 Shift + - / - / EPG		
 History	 Shift + P / C / FAV		
 <</ <<	 Rewind		
 Pause	 Pause		
 >> >>	 Fast Forward		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

