



Originale	Sostituto
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
16:9	Picture / Format
0/FAV	Fav / Marker / PC
0/FAV	0
[O]/Repeat	Shift + Green / APP /
Vol+	Vol+
Input	AV / Input / RDS

Originale	Sostituto
P+	CH+ / Page+
Vol-	Vol-
EPG/?/A-B	Shift + Yellow / YouTube /
EPG/?/A-B	Guide / EPG / -/--
P-	CH- / Page-
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Q/Double	Shift + Red / Netflix /
M	Menu / Home
←	Back / Return
i	Info / Angle
Red	Red / Netflix / Search
Play/Pause	Play / Slow
Green	Green / APP / Repeat





Originale	Sostituto
 <<	 << / Tune-
 Yellow	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Blue	 Blue / Prime Video / Random
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 TXT	 Text / Goto
 >>I	 >>I / Preset+
 [...]	 Subtitle / EQ
 Audio	 Audio / Lang I/I

Originale	Sostituto

