 



 




 




 
 





 










 



 





 





 







 









Originale	Sostituto
 Power	 Power
 [=]/Text	 Text / Goto
 I-II	 Audio / Lang I/II
 [<>]/[+]	 Shift + Picture / Format
 AV/[?]	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [...]	 Subtitle / EQ
 [1 2] Split Window	 Display / Media
 Cancel	 Exit / Cancel / Clear
 Option	 Setup / OPT /
 Tv Menu	 Menu / Home
 Digital Menu	 D.Menu / Top
 Up	 Up
 Left	 Left

Originale	Sostituto
 OK	 OK
 Right	 Right
 Down	 Down
 A/D	 Shift + Audio / Lang I/II
 EPG	 Guide / EPG / -/-
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+
 Vol-	 Vol-
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Originale	Sostituto
 8	 8
 9	 9
 [i+]	 Info / Angle
 0	 0
 P<P/Back	 Back / Return
 [-O-]/Active Ctrl	 Smart / List
 DV3/Tv/Radio	 TV/Radio /
 Sound Smart	 Sound / Title
 Picture Smart	 Picture / Format

Originale	Sostituto

