







 


















 


 

 

 

 

 







 



 



 







 

 






Originale	Sostituto
 Power	 Power
 Tv	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV CH	 Fav / Marker / PC
 0	 0
 PRE CH	 Back / Return
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Source	 AV / Input / RDS
 PR-	 CH- / Page-
 Info	 Info / Angle
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Up	 Up
 Return	 Shift + Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 CH LIST	 Smart / List
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Originale	Sostituto
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TTX/MIX	 Text / Goto
 Media P	 Display / Media
 P SIZE	 Zoom / Size
 Dual	 Audio / Lang I/II
 AD	 Eject / Surround
 SUBT	 Subtitle / EQ
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Originale	Sostituto

