



Originale	Sostituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 TXT	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Originale	Sostituto
 CEC	 Smart / List
 ?	 D.Menu / Top
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Back	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Guide	 Guide / EPG / -/-
 Tools	 Setup / OPT /
 Vol+	 Vol+
 Source	 AV / Input / RDS
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer





Originale

Sostituto

	PR-		CH- / Page-
	I<		I<< / Preset-
	>I		>>I / Preset+
<< button"/>	<<		<< / Tune-
>> button"/>	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[<>]		Picture / Format
	Dialog		Audio / Lang I/II
	[...]		Subtitle / EQ
	Tv/Radio		TV/Radio /
	My Media		Display / Media

Originale

Sostituto

