










 

 

 


 
 
 
 


 
 


 

 

 



 


 
 



 

 
 
 
 
 




 



 


 




 
 
 

 
 

 

 
 



 
 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		CH+		Ch +
	Mute		Mute		CH-		Ch -
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		OK		Ok
	6		6		Exit		Exit
	7		7		Menu		Menu
	8		8		Aspect		Format
	9		9		Sleep		Sleep
	0		0		Rec		Rec
	PR.List		List		Red/DVD Setup		Red
	Recall		Pre Ch		Green/Repeat		Green
	Source		AV		Yellow/Languag		Yellow
	Vol+		Vol +		Blue/DVD Menu		Blue
	Vol-		Vol -		Title/PC Auto		Media





Originale	Sostituto	Originale	Sostituto
 Tv/Radio	 TV/R	 PIC.Mode	 Shift + Format
 I-II/Audio	 Dual	 S.Mode	 Shift + Dual
 Subtitle	 Subt	 Zoom	 Shift + Eject
 Prog/Index	 Options		
 Step/Freeze	 Back		
 Text	 Text		
 Info/Display	 Info		
 Play/Size	 Play		
 Pause/Subpage	 Pause		
 Stop/Hold	 Stop		
 I<<	 I<<		
 >>I	 >>I		
 <<	 <<		
 >>	 >>		
 Rec List	 Guide		
 Open/Close	 Eject		
 A-B/Reveal	 D. Menu		

