


 
 
 


 
 

 
 



 




Originale	Sostituto	Originale	Sostituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Originale	Sostituto	Originale	Sostituto
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[]>		3D
	Subtitle		Subt

 









 

 

 
 
 

 

 
 
 


 

 

 
 
 
 

 

 

 

 
 


 



 







 

 

 

 
 
 

 





Originale		Sostituto		Originale		Sostituto	
	Text		Text				
	II/II>/[V]		Pause				
	[i+]/[≡i]		Info				
	O)I/I		Dual				
	Stop		Stop				
	Play/[≡o]		Play				
	Eject		Eject				
	I<</[≡?]		I<<				
	<</[≡+]		<<				
	>>/[≡]		>>				
	>>I/[O]/[≡X]		>>I				
	AD		Shift + Subt				
	Audio		Shift + Dual				





Originale		Sostituto		Originale		Sostituto	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/II>/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject



 

 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 
 
 
 

 

 
 
 

 

 
 
 
 
 
 
 


 
 



 

 
 
 



 


 


 
 


 
 



 

 



 
 


 


 


 
 
 

 
 

 
 
 





Originale		Sostituto		Originale	Sostituto
	<</[≡?]		<<		
	<</[≡+]		<<		
	>>/[≡◇]		>>		
	>> /[O]/[≡X]		>>		
AUDIO	Audio		+ Shift + Dual		





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P-	 Ch -
 ←[/]→	 3D	 Mute	 Mute
 1	 1	 Guide/Top	 Guide
 2	 2	 Exit/Return	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Menu/DVD	 Menu
 9	 9	 Tv/FAV/Radio/Set	 TV/R
 0	 0	 Red	 Red
 Source	 AV	 Green	 Green
 ATV/DTV/Content Menu	 Smart	 Yellow	 Yellow
 Vol+	 Vol +	 Blue	 Blue
 Vol-	 Vol -	 Text	 Text
 P+	 Ch +	 [<>]	 Format

Originale	Sostituto	Originale	Sostituto
 MUTE	 SHIFT	 TV	 DVD
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 <<<	 II
 <<<	 II	 ■	 >>>
 >>>	 <<<	 DISC NAV	 SOUND
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 LIST	 DUAL	 PICTURE	 ECO
 PROG	 SEARCH	 FORMAT	 3D
 PROG	 SEARCH	 TV/R	 TIMER
 SLEEP	 REPEAT	 ZOOM	 AV
 SLEEP	 REPEAT	 TEXT	 AV
 E-MANUAL	 D.MENU	 TOP MENU	 DISPLAY
 E-MANUAL	 D.MENU	 MENU	 INFO
 MENU	 INFO	 OK	 RETURN
 CLEAR	 EXIT	 HOME	 SMART
 CLEAR	 EXIT	 APP	 MEDIA
 VOL+	 VOL-	 CH+	 CH-
 VOL+	 VOL-	 1	 2
 VOL-	 CH+	 3	 4
 1	 2	 5	 6
 2	 3	 7	 8
 3	 4	 9	 0
 4	 5	 GUIDE	 PRE-CH
 5	 6	 A	 B
 6	 7	 C	 D
7	8		
8	9		





Originale	Sostituto
[i+]/[≡i]	Info
II/II>/[▼]	Pause
Subtitle	Subt
O)I/II	Dual
Play/[≡o]	Play
Stop	Stop
Eject	Eject
I<</[≡?]	I<<
<</[≡+]	<<
>>/[≡◇]	>>
>>I/[O]/[≡X]	>>I
Audio	+ Shift + Dual
AD	+ Shift + Subt

Originale	Sostituto

