



 

 

 

 
 


 
 



 


Originale	Sostituto	Originale	Sostituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Originale	Sostituto	Originale	Sostituto
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	Subtitle		3D
	Subtitle		Subt

 






 


 
 
 

 
 
 

 

 
 
 
 

 

 


 
 
 

 
 
 

 

 



 


 
 
 






 

 

 

 
 
 

 





	Originale	Sostituto		Originale	Sostituto
	Text	 Text			
	II/II>/[▼]	 Pause			
	[i+]/[≡i]	 Info			
	O)I/II	 Dual			
	Stop	 Stop			
	Play/[≡o]	 Play			
	Eject	 Eject			
	I<</[≡?]	 I<<			
	<</[≡+]	 <<			
	>>/[≡♦]	 >>			
	>>I/[O]/[≡X]	 >>I			
	AD	 Shift + Subt			
	Audio	 Shift + Dual			





Originale		Sostituto		Originale		Sostituto	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/ >/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject



 

 
 
 
 
 

 
 
 

 
 
 
 
 
 
 
 
 
 
 

 

 
 
 

 

 
 
 
 
 
 
 


 
 


 
 

 
 
 



 


 


 
 


 
 









 

 
 
 
 
 
 
 

 

 

 




 


 


 

 
 
 

 
 

 
 






 
 








 

 




 

 






Originale		Sostituto		Originale	Sostituto
	<</[≡?]		<<		
	<</[≡+]		<<		
	>>/[≡◇]		>>		
	>> /[O]/[≡X]		>>		
	Audio	 + 	Shift + Dual		





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 P-	 Ch -
 ←[/]→	 3D	 Mute	 Mute
 1	 1	 Guide/Top	 Guide
 2	 2	 Exit/Return	 Exit
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Menu/DVD	 Menu
 9	 9	 Tv/FAV/Radio/Set	 TV/R
 0	 0	 Red	 Red
 Source	 AV	 Green	 Green
 ATV/DTV/Content Menu	 Smart	 Yellow	 Yellow
 Vol+	 Vol +	 Blue	 Blue
 Vol-	 Vol -	 Text	 Text
 P+	 Ch +	 [<>]	 Format

Originale	Sostituto	Originale	Sostituto
 MUTE	 SHIFT	 TV	 DVD
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 <<<	
 <<<		 ■	 >>>
 >>>	 <<<	 DISC NAV	 SOUND
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 LIST	 DUAL	 PICTURE	 ECO
 PROG	 SEARCH	 FORMAT	 3D
 SLEEP	 TV/R	 E-MANUAL	 REPEAT
 SLEEP	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 ▲	 AV
 D.MENU	 TEXT	 TOP MENU	 DISPLAY
 TOP MENU	 DISPLAY	 MENU	 INFO
 MENU	 INFO	 OK	 RETURN
 CLEAR	 EXIT	 HOME	 SMART
 CLEAR	 EXIT	 APP	 MEDIA
 VOL+	 CH+	 VOL-	 CH-
 VOL+	 CH+	 1	 2
 VOL-	 CH-	 3	 4
 1	 2	 5	 6
2	3	7	8
3	4	9	0
4	5	GUIDE	PRE-CH
5	6	A	B
6	7	C	D
7	8		
8	9		





Originale		Sostituto		Originale		Sostituto	
	[i+]/[≡i]		Info				
	II/II>/[▼]		Pause				
	Subtitle		Subt				
	O)/II		Dual				
	Play/[≡o]		Play				
	Stop		Stop				
	Eject		Eject				
	I<</[≡?]		I<<				
	<</[≡+]		<<				
	>>/[≡◇]		>>				
	>>I/[O]/[≡X]		>>I				
	Audio	+	Shift + Dual				
	AD	+	Shift + Subt				

