













 



 

 

 













 











Originale	Sostituto	Originale	Sostituto
	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		Fav / Marker / PC
	TTX/MIX		Text / Goto
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer

Originale	Sostituto	Originale	Sostituto
	PR+		CH+ / Page+
	PR-		CH- / Page-
	CH.List		Shift + Smart / List
	Menu		Menu / Home
	Smart Hub		Smart / List
	Guide		Guide / EPG / -/-
	Tools		Setup / OPT /
	Info		Info / Angle
	Up		Up
	Down		Down
	Right		Right
	Return		Back / Return
	Left		Left
	Enter		OK
	Exit		Exit / Cancel / Clear
	Red/A		Red / Netflix / Search
	Green/B		Green / APP / Repeat





Originale	Sostituto
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 E-Manual	 D.Menu / Top
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <</ <<	 << / Tune-
 AD/Subt.	 Subtitle / EQ
 AD/Subt.	 Audio / Lang I/II
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>/>>	 >> / Tune+

Originale	Sostituto

