

 

 












 

 




Originale	Sostituto
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TTX/MIX	Text / Goto
0	0
PRE-CH	Back / Return
VOL+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Originale	Sostituto
VOL-	Vol-
CH.LIST	Display / Media
CH.LIST	Shift + Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Smart HUB	Smart / List
Guide	Guide / EPG / -/--
Tools	Setup / OPT /
Up	Up
Info	Info / Angle
Left	Left
Enter	OK
Right	Right
Return	Shift + Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red/A	Red / Netflix / Search





Originale	Sostituto
 Green/B	 Green / APP / Repeat
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 E-Manual	 D.Menu / Top
 3D	 Picture / Format
 AD/Subt	 Subtitle / EQ
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 >>I	 >>I / Preset+

Originale	Sostituto

