



 


 

 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 









Originale	Sostituto
 Power	 Power
 Source	 AV
 Sports	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TTX/MIX	 Text
 PRE-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Originale	Sostituto
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 CH.LIST	 List
 Menu	 Menu
 Smart HUB	 Smart
 Guide	 Guide
 Tools	 Options
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Return	 Back
 Exit	 Exit
 Red/A	 Red





Originale	Sostituto
Green/B	Green
Yellow/C	Yellow
Blue/D	Blue
E-Manual	SHIFT + D.MENU Shift + D. Menu
Extra	D.MENU D. Menu
Search	TV/R
PIC.Size	Format
Picture	SHIFT + Format Shift + Format
AD/Subt	Subt
<</I<<	<<
Pause	Pause
>>/>>I	>>
Rec	Rec
Play	Play
Stop	Stop

Originale	Sostituto

