



 



 



 

 

 

 
 

 



 





Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>I	 >>I / Preset+
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Tv/Radio	 TV/Radio /

Originale	Sostituto
 Index	 D.Menu / Top
 Reveal	 Setup / OPT /
 Text	 Text / Goto
 AV/Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i/Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-



