



 



 



 

 

 

 
 

 



 





 


Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 P.Mode	 Picture / Format
 Size	 Zoom / Size
 Sleep	 Sleep / Timer
 Tv/Radio	 TV/Radio /

Originale	Sostituto
 Index	 D.Menu / Top
 Recall	 Setup / OPT /
 Text	 Text / Goto
 AV/Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i/Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Back	 Back / Return
 Vol+	 Vol+
 Rec List	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-





Originale	Sostituto
 ATV	 Display / Media
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Originale	Sostituto
 Blue	 Blue / Prime Video / Random
 Power/Display	 Shift + Power
 Hold	 Shift + Stop /
 Aspect	 Shift + Picture / Format
 USB	 Shift + 8

