
 

 




 













 



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 FAV-	 Shift + CH- /
 Mute	 Mute / Dimmer	 CH+	 CH+ / Page+
 1	 1	 P.Mode	 Picture / Format
 2	 2	 Vol+	 Vol+
 3	 3	 CH-	 CH- / Page-
 4	 4	 S.Mode	 Sound / Title
 5	 5	 Vol-	 Vol-
 6	 6	 Source	 AV / Input / RDS
 7	 7	 Sleep	 Sleep / Timer
 8	 8	 Aspect	 Shift + Picture / Format
 9	 9	 Info	 Info / Angle
 -/--	 Shift + Guide / EPG / -/--	 Up	 Up
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK
 Audio	 Audio / Lang I/II	 Right	 Right
 FAV+	 Shift + CH+ /	 Menu	 Menu / Home
 FAV	 Fav / Marker / PC	 Down	 Down





Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Index	 Display / Media
 Play/Mix	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Reveal	 Stop / Hold
 <</Hold	 << / Tune-
 <</Hold	 Shift + Stop /
 >>/Subpage	 >> / Tune+
 Size	 Zoom / Size
 I<<	 I<< / Preset-
 >>I/Cancel	 >>I / Preset+
 T-Shift	 Smart / List
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

