







 

Originale	Sostituto	Originale	Sostituto
Power	Power	FAV-	Shift + CH- /
Mute	Mute / Dimmer	CH+	CH+ / Page+
1	1	P.Mode	Picture / Format
2	2	Vol+	Vol+
3	3	CH-	CH- / Page-
4	4	S.Mode	Sound / Title
5	5	Vol-	Vol-
6	6	Source	AV / Input / RDS
7	7	Sleep	Sleep / Timer
8	8	Aspect	Shift + Picture / Format
9	9	Info	Info / Angle
-/--	Shift + Guide / EPG / -/--	Up	Up
0	0	Left	Left
Recall	Back / Return	OK	OK
Audio	Audio / Lang I/II	Right	Right
FAV+	Shift + CH+ /	Menu	Menu / Home
FAV	Fav / Marker / PC	Down	Down

Originale	Sostituto	Originale	Sostituto
FAV-	Shift + CH- /	FAV-	Shift + CH- /
CH+	CH+ / Page+	CH+	CH+ / Page+
P.Mode	Picture / Format	P.Mode	Picture / Format
Vol+	Vol+	Vol+	Vol+
CH-	CH- / Page-	CH-	CH- / Page-
S.Mode	Sound / Title	S.Mode	Sound / Title
Vol-	Vol-	Vol-	Vol-
Source	AV / Input / RDS	Source	AV / Input / RDS
Sleep	Sleep / Timer	Sleep	Sleep / Timer
Aspect	Shift + Picture / Format	Aspect	Shift + Picture / Format
Info	Info / Angle	Info	Info / Angle
Up	Up	Up	Up
Left	Left	Left	Left
OK	OK	OK	OK
Right	Right	Right	Right
Menu	Menu / Home	Menu	Menu / Home
Down	Down	Down	Down





Originale	Sostituto
 Exit	 Exit / Cancel / Clear
 Text	 Text / Goto
 Index	 Display / Media
 Play/Mix	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop/Reveal	 Stop / Hold
 <</Hold	 << / Tune-
 <</Hold	 Shift + Stop /
 >>/Subpage	 >> / Tune+
 Size	 Zoom / Size
 I<<	 I<< / Preset-
 >>I/Cancel	 >>I / Preset+
 T-Shift	 Smart / List
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 EPG	 Guide / EPG / -/--
 Red	 Red / Netflix / Search

Originale	Sostituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

