



 

 



 

 

 









 
 
 
 
 

 

 



Originale	Sostituto
Power	Power
Power Tv	+  Shift + Power
DVD	+  Shift + 2
VCR	+  Shift + 4
Eject/Open-Close	Eject / Surround
AV Input Tv	+  Shift + AV / Input / RDS
1	1
2	2
3	3
PR+ Tv	CH+ / Page+
4	4
5	5
6	6
PR- Tv	CH- / Page-
7	7
8	8
9	9

Originale	Sostituto
Vol+ Tv	Vol+
Rec	Rec / Rec Mode
0	0
AV Input	AV / Input / RDS
Vol- Tv	Vol-
<< Scan	<< / Tune-
Scan >>	>> / Tune+
I<< Skip	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
PR/TRK+	+  Shift + CH+ /
Up	Up
Menu/List	D.Menu / Top
Left	Left





Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Originale	Sostituto

