 


 
 







 
 

 

 

 
 







 
 


 







 
 






 
 

 

 

 

 

 

 





 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 Jump	 Media
 Source	 AV	 FAV.CH	 Pre Ch
 I/II/Audio	 Dual	 OK	 Ok
 1	 1	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 Right	 Right
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 PR-	 Ch -
 8	 8	 PR+	 Ch +
 9	 9	 Red/D.Setup	 Red
 0	 0	 Green/Repeat	 Green
 Menu	 Menu	 Yellow/Zoom	 Yellow
 Info	 Info	 Blue/Goto	 Blue
 Exit	 Exit	 [=+]/DTV/Radio	 TV/R





Originale	Sostituto
[≡♦]/USB/SD	Options
[≡?]/Timeshift	Pause
[≡i]/PVR List	3D
Rec	Rec
Stop	Stop
Play/Pause	Play
<<	<<
>>	>>
<<	<<
>>	>>
DVD Menu	D. Menu
Text	Text
Subtitle	Subt
Guide	Guide
Eject	Eject
P.Mode	+ Shift + Format
S.Mode	+ Shift + Dual

Originale	Sostituto
P.Size	Format

