 



 



 

























 

 





 



 

 

 

 









 

 

 





Originale	Sostituto
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 HDMI	 Shift + 0
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /
 Prog+	 CH+ / Page+

Originale	Sostituto
 Prog-	 CH- / Page-
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Picture / Format
 Variable Skip	 Zoom / Size
 Guide	 Guide / EPG / -/-
 Top Menu	 Shift + D.Menu / Top Menu
 Disc Menu	 D.Menu / Top
 Up	 Up
 Left	 Left
 Enter/OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search





Originale	Sostituto	Originale	Sostituto
	Green		Subtitle
	Yellow/Mode		Subtitle / EQ
	Blue/Search		Audio / Lang I/II
	<</REV		Smart / List
	Play		
	>>/FWD		
	I<< Skip		
	Stop		
	>>I Skip		
	Pause		
	VCR		
	HDD		
	DVD		
	Time Slip		
	Dubbing		
	Rec Mode		
	Rec		
	Green / APP / Repeat		
	Yellow / YouTube / Repeat		
	Blue / Prime Video / Random		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	I<< / Preset-		
	Stop / Hold		
	>>I / Preset+		
	Pause / Step / Freeze		
	Shift + 4		
	Shift + 7		
	Shift + 2		
	TV/Radio /		
	Sound / Title		
	Shift + Rec / Rec Mode		
	Rec / Rec Mode		

