 


 
 

 

 

 

 

 

 
 

 
 



 

 
 
 

 
 



 



 



 

 
 


 
 

 

 
 
 
 


 

 
 
 

 





Originale		Sostituto		Originale		Sostituto	
	Power		Power		>>/Forward		>>
	DVD		Guide		I<< Skip		I<<
	VCR		Shift + Guide		Pause/Step		Pause
	Eject/Open/Close		Pre Ch		>>I Skip		>>I
	1		1		Play		Play
	2		2		Stop		Stop
	3		3		Home		Smart
	4		4		Disc Menu List		Menu
	5		5		PR/CH Up/TRK+		Up
	6		6		PR/CH		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Enter		Ok
	0		0		Display		Info
	Clear		Exit		Return		Back
	Av Input		AV		O))/Audio		Dual
	<</Backward		<<		[...]/Subtitle		Subt





Originale	Sostituto		
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
I.SKIP	I.Skip	REPEAT TEXT	Text
REC	Rec	REC MODE	Rec
REC MODE	Rec Mode	SHIFT + REC MODE	Shift + Rec
DUBBING	Dubbing	PICTURE FORMAT	Format
TITLE	Title	SETTINGS OPT	Options
MARKER --	Marker	DISC NAV LIST	List
PLAY MODE	Play Mode	SHIFT + PLAY MODE	Shift + Play
SEARCH	- Search	ZOOM	Eject
THUMBNAI	Thumbnail	PROG SLEEP	Sleep
CHP. ADD	CHP.ADD	E-MANUAL D.MENU	D. Menu
TV/VCR	Tv/VCR	SEARCH TV/R	TV/R
TIMESHIFT	Timeshift	ECO 3D	3D
TV POWER	Power Tv	SHIFT + TV POWER	Shift + Power
*	*	SHIFT + TIMER AV	Shift + AV
AV/INPUT	AV Input Tv	APP MEDIA	Media
PR/CH	PR/CH + Tv	+ CH	Ch +

Originale	Sostituto		
	PR/CH - Tv	CH -	Ch -
VOL	Vol+ Tv	+ VOL	Vol +
	Vol- Tv	VOL -	Vol -

