



 


 



 




 



 





 

 



 
 

 
 


 
 

 
 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 

 
 
 
 
 

 
 
 





 



Originale	Sostituto	Originale	Sostituto
 Power	 Power	 S.Mode	 Shift + Dual
 Mute	 Mute	 Source	 AV
 1	 1	 CH+	 Ch +
 2	 2	 CH-	 Ch -
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 OK	 Ok
 8	 8	 Exit	 Exit
 9	 9	 Menu	 Menu
 0	 0	 Rec	 Rec
 CH.List	 List	 Timeshift	 Options
 Recall	 Pre Ch	 Timer	 Shift + AV
 Vol+	 Vol +	 Rec.List	 Media
 Vol-	 Vol -	 Red	 Red
 PIC.Mode	 Shift + Format	 Green	 Green





Originale	Sostituto
 Yellow	 Yellow
 Blue	 Blue
 Aspect	 Format
 Tv/Radio	 TV/R
 Sleep	 Sleep
 Subtitle	 Subt
 Index	 Guide
 Reveal	 D. Menu
 Audio	 Dual
 Display	 Info
 Text	 Text
 Play/Size	 Play
 Pause/Subpage	 Pause
 Stop/Hold	 Stop
 I<<	 I<<
 >>I	 >>I
 <<	 <<

Originale	Sostituto
 >>	 >>

