



 










 


 




 




 

 






 


 
 



 








 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 TV	 DVD
 TV/RAD	 SAT	 SLOW	 STEP-FREEZE
 Input	 AUX	 HOLD	 REC MODE
 AV Mode	 PRESET+	 TUNE-	 TUNE+
 Energy Saving	 PRESET-	 TITLE	 LANG UI
 1	 EQ	 SOUND	 AUDIO
 2	 SURROUND	 FORMAT	 SIZE
 3	 TV RADIO	 PICTURE	 ZOOM
 4	 RDS	 TOP MENU	 OPT-TOOLS
 5	 AV INPUT	 D.MENU	 SETUP
 6	 HOME	 GOTO	 TEXT
 7	 ANGLE	 HOME	 DIMS
 8	 INFO	 MENU	 OK
 9	 RETURN	 CLEAR	 EXIT
 List	 BACK	 CANCEL	 LIST
 0	 MENU	 VOL+	 SMART
 Q.View	 HOME	 VOL-	 MEDIA DISPLAY
	 RETURN	 TV	 CH PAGE
	 BACK	 DVD	 CD - STB
	 RETURN/EXIT	 VIDEO	 TAPE
	 RED	 AUX - HDD	 USB
	 GREEN	 RETURN	 TUNER
	 GREEN	 NETFLIX	 AUX - HDD
	 GREEN	 SEARCH	 USB
	 GREEN	 NETFLIX	 TUNER
	GREEN	NETFLIX	TUNER





Originale	Sostituto
Blue/Pause	Blue / Prime Video / Random
Blue/Pause	Pause / Step / Freeze
Text/[≡]	Text / Goto
T.OPT/<<<	I<<< / Preset-
T.OPT/<<<	Setup / OPT /
T.OPT/<<<	<<< / Tune-
Subtitle/>>>	>>>I / Preset+
Subtitle/>>>	Subtitle / EQ
Subtitle/>>>	>>> / Tune+
Simplink	Sleep / Timer
Q.Menu	D.Menu / Top
Info	Info / Angle
Guide	Guide / EPG / -/--
FAV/Mark	Fav / Marker / PC

Originale	Sostituto

