



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Play		Play / Slow		i		Info / Angle
	Pause		Pause / Step / Freeze		Left		Left
	Stop		Stop / Hold		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	Lang		Audio / Lang I/II		Back		Back / Return
	Source (Games)		Eject / Surround		Vol+		Vol+
	Movie-Music-Phot		Picture / Format		World (Violet)		Smart / List
	[≡]..		Zoom / Size		PR+		CH+ / Page+
	*/O		Sleep / Timer		Vol-		Vol-
	TV		TV/Radio /		*/Q		Display / Media
	Q.Menu		D.Menu / Top		PR-		CH- / Page-
	[-O-]		Setup / OPT /		1		1
	[≡]/Text		Text / Goto		2		2





Originale	Sostituto	Originale	Sostituto
3 def 3	3 CD - STB 3		
4 ghi 4	4 VIDEO 4		
5 jkl 5	5 TAPE 5		
6 mno 6	6 TUNER 6		
7 pqrs 7	7 AUX - HDD 7		
8 tuv 8	8 USB 8		
9 wxyz 9	9 BLUETOOTH 9		
Guide	GUIDE EPG Guide / EPG / -/--		
0	0 HDMI - BAT 0		
Red	NETFLIX SEARCH Red / Netflix / Search		
Green	APP REPEAT Green / APP / Repeat		
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat		
Blue	Prime Video RANDOM Blue / Prime Video / Random		
Recall	SHIFT + RETURN BACK Shift + Back / Return		

