



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Play		Play / Slow		i		Info / Angle
	Pause		Pause / Step / Freeze		Left		Left
	Stop		Stop / Hold		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	Lang		Audio / Lang I/II		Back		Back / Return
	Source (Games)		Eject / Surround		Vol+		Vol+
	Movie-Music-Phot		Picture / Format		World (Violet)		Smart / List
	[≡]..		Zoom / Size		PR+		CH+ / Page+
	*/O		Sleep / Timer		Vol-		Vol-
	TV		TV/Radio /		*/Q		Display / Media
	Q.Menu		D.Menu / Top		PR-		CH- / Page-
	[-O-]		Setup / OPT /		1		1
	[≡]/Text		Text / Goto		2		2





Originale		Sostituto		Originale		Sostituto	
3 def	3	CO - STB	3				
4 ghi	4	VIDEO	4				
5 jkl	5	TAPE	5				
6 mno	6	TUNER	6				
7 pqrs	7	AUX - HDD	7				
8 tuv	8	USB	8				
9 wxyz	9	BLUETOOTH	9				
Guide	Guide	GUIDE EPG	Guide / EPG / -/--				
0	0	HDMI - BAT	0				
	Red	NETFLIX SEARCH	Red / Netflix / Search				
	Green	APP REPEAT	Green / APP / Repeat				
	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat				
	Blue	Prime Video RANDOM	Blue / Prime Video / Random				
	Recall	SHIFT + RETURN BACK	Shift + Back / Return				

