



| Originale |                  | Sostituto |                       | Originale |                | Sostituto |                       |
|-----------|------------------|-----------|-----------------------|-----------|----------------|-----------|-----------------------|
|           | Power            |           | Power                 |           | Menu           |           | Menu / Home           |
|           | Mute             |           | Mute / Dimmer         |           | Up             |           | Up                    |
|           | Play             |           | Play / Slow           |           | i              |           | Info / Angle          |
|           | Pause            |           | Pause / Step / Freeze |           | Left           |           | Left                  |
|           | Stop             |           | Stop / Hold           |           | OK             |           | OK                    |
|           | Rec              |           | Rec / Rec Mode        |           | Right          |           | Right                 |
|           | <<               |           | << / Tune-            |           | Exit           |           | Exit / Cancel / Clear |
|           | >>               |           | >> / Tune+            |           | Down           |           | Down                  |
|           | Lang             |           | Audio / Lang I/II     |           | Back           |           | Back / Return         |
|           | Source (Games)   |           | Eject / Surround      |           | Vol+           |           | Vol+                  |
|           | Movie-Music-Phot |           | Picture / Format      |           | World (Violet) |           | Smart / List          |
|           | [≡]..            |           | Zoom / Size           |           | PR+            |           | CH+ / Page+           |
|           | */O              |           | Sleep / Timer         |           | Vol-           |           | Vol-                  |
|           | TV               |           | TV/Radio /            |           | */Q            |           | Display / Media       |
|           | Q.Menu           |           | D.Menu / Top          |           | PR-            |           | CH- / Page-           |
|           | [-O-]            |           | Setup / OPT /         |           | 1              |           | 1                     |
|           | [≡]/Text         |           | Text / Goto           |           | 2              |           | 2                     |



