



| Originale |                  | Sostituto |                       | Originale |                | Sostituto |                       |
|-----------|------------------|-----------|-----------------------|-----------|----------------|-----------|-----------------------|
|           | Power            |           | Power                 |           | Menu           |           | Menu / Home           |
|           | Mute             |           | Mute / Dimmer         |           | Up             |           | Up                    |
|           | Play             |           | Play / Slow           |           | i              |           | Info / Angle          |
|           | Pause            |           | Pause / Step / Freeze |           | Left           |           | Left                  |
|           | Stop             |           | Stop / Hold           |           | OK             |           | OK                    |
|           | Rec              |           | Rec / Rec Mode        |           | Right          |           | Right                 |
|           | <<               |           | << / Tune-            |           | Exit           |           | Exit / Cancel / Clear |
|           | >>               |           | >> / Tune+            |           | Down           |           | Down                  |
|           | Lang             |           | Audio / Lang I/II     |           | Back           |           | Back / Return         |
|           | Source (Games)   |           | Eject / Surround      |           | Vol+           |           | Vol+                  |
|           | Movie-Music-Phot |           | Picture / Format      |           | World (Violet) |           | Smart / List          |
|           | [≡]..            |           | Zoom / Size           |           | PR+            |           | CH+ / Page+           |
|           | */O              |           | Sleep / Timer         |           | Vol-           |           | Vol-                  |
|           | TV               |           | TV/Radio /            |           | */Q            |           | Display / Media       |
|           | Q.Menu           |           | D.Menu / Top          |           | PR-            |           | CH- / Page-           |
|           | [-O-]            |           | Setup / OPT /         |           | 1              |           | 1                     |
|           | [≡]/Text         |           | Text / Goto           |           | 2              |           | 2                     |





| Originale | Sostituto           |
|-----------|---------------------|
| 3 def     | CO - STB 3          |
| 4 ghi     | VIDEO 4             |
| 5 jkl     | TAPE 5              |
| 6 mno     | TUNER 6             |
| 7 pqrs    | AUX - HDD 7         |
| 8 tuv     | USB 8               |
| 9 wxyz    | BLUETOOTH 9         |
| Guide     | GUIDE EPG           |
| 0         | HDMI - BAT 0        |
| Red       | NETFLIX SEARCH      |
| Green     | APP REPEAT          |
| Yellow    | YouTube REPEAT A-B  |
| Blue      | Prime Video RANDOM  |
| Recall    | SHIFT + RETURN BACK |

| Originale | Sostituto |
|-----------|-----------|
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |
|           |           |

