



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Up		Up
	Play		Play / Slow		i		Info / Angle
	Pause		Pause / Step / Freeze		Left		Left
	Stop		Stop / Hold		OK		OK
	Rec		Rec / Rec Mode		Right		Right
	<<		<< / Tune-		Exit		Exit / Cancel / Clear
	>>		>> / Tune+		Down		Down
	Lang		Audio / Lang I/II		Back		Back / Return
	Source (Games)		Eject / Surround		Vol+		Vol+
	Movie-Music-Phot		Picture / Format		World (Violet)		Smart / List
	[≡]..		Zoom / Size		PR+		CH+ / Page+
	*/O		Sleep / Timer		Vol-		Vol-
	TV		TV/Radio /		*/Q		Display / Media
	Q.Menu		D.Menu / Top		PR-		CH- / Page-
	[-O-]		Setup / OPT /		1		1
	[≡]/Text		Text / Goto		2		2





Originale	Sostituto	Originale	Sostituto
3 def 3	3 3		
4 ghi 4	4 4		
5 jkl 5	5 5		
6 mno 6	6 6		
7 pqrs 7	7 7		
8 tuv 8	8 8		
9 wxyz 9	9 9		
Guide Guide / EPG / -/-	Guide / EPG / -/-		
0 0	0 0		
Red Red / Netflix / Search	Red / Netflix / Search		
Green Green / APP / Repeat	Green / APP / Repeat		
Yellow Yellow / YouTube / Repeat	Yellow / YouTube / Repeat		
Blue Blue / Prime Video / Random	Blue / Prime Video / Random		
Recall Shift + Back / Return	Shift + Back / Return		

Originale	Sostituto	Originale	Sostituto

