


 








 




 



 

 











 



 
 

 



 
 

 



 



 

 

 

 

 

 




Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 Sound	 Shift + Dual
 8	 8	 PIC	 Options
 9	 9	 CH+	 Ch +
 0	 0	 CH-	 Ch -
 Audio	 Dual	 Sleep	 Sleep
 Recall	 Back	 Aspect	 3D
 Tv-Menu	 Menu	 Freeze	 Shift + Media
 Source	 AV	 Tv/Radio	 TV/R
 CH.List	 List	 Text	 Text



