









 
 
 







 

 





 
 



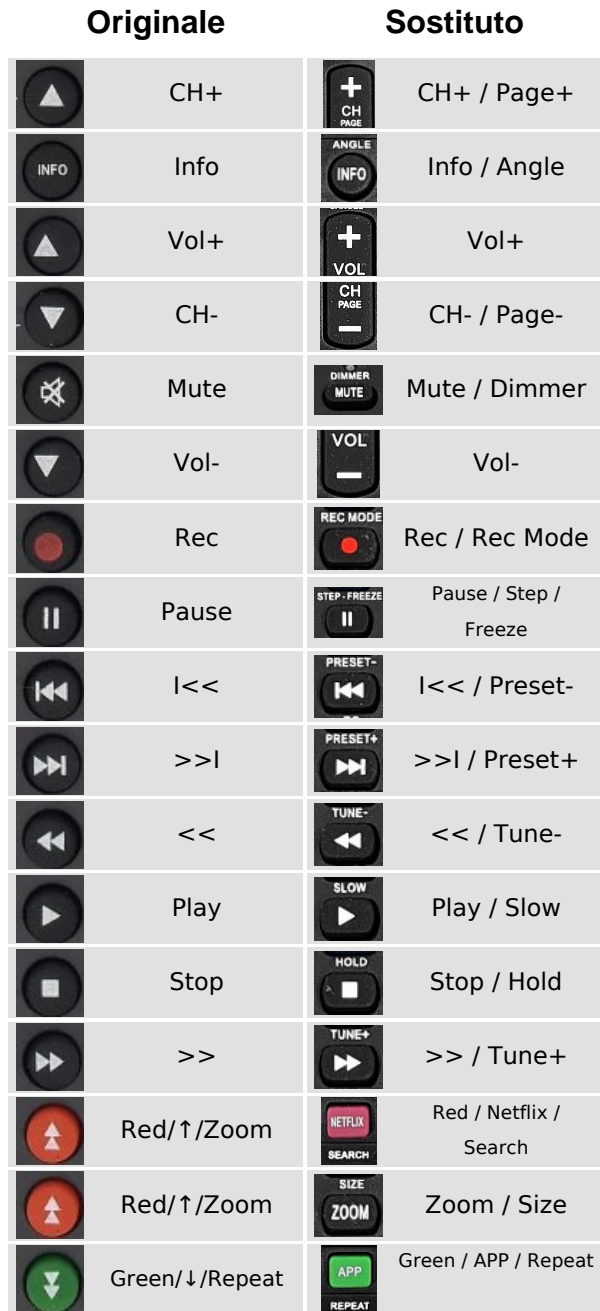




Originale	Sostituto
	Power
	Sleep
	Screen
	Presets
	↔
	FAV
	Lang
	Subtitle
	TXT
	1
	2
	3
	4
	5
	6
	7
	8

Originale	Sostituto
	9
	EPG
	0
	Swap
	Photo/Music/Movi
	World
	Source
	Menu
	Up
	Left
	OK
	Right
	Down
	C
	Disp.
	Search Mode
	Return





Power DIMMER MUTE SHIFT

TV DVD SAT AUX

SLOW STEP-FREEZE HOLD REC MODE

TUNE- TUNE+ PRESET- PRESET+

TITLE LANG VUI EQ SURROUND

SOUND AUDIO SUBTITLE PROGRAM

FORMAT SIZE TIMER TV/RADIO

PICTURE ZOOM SLEEP RDS

TOP MENU OPT-TOOLS GOTO AV INPUT

D.MENU SETUP TEXT

HOME ANGLE

MENU INFO

OK

CLEAR EXIT RETURN

CANCEL LIST BACK

+ VOL + CH PAGE

- -

TV DVD CD-578

1 2 3

VIDEO TAPE TUNER

4 5 6

AUX-HDD USB BLUETOOTH

7 8 9

HDMI-SAT PC

GUIDE FAV MARKER

EPO 0

NETFLIX APP YouTube Prime Video

SEARCH REPEAT REPEAT A-B RANDOM

Mandis Shop

www.mandis.tv