 



















 

 

 




 
 

 

 

 














 

 

 







Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Screen	 Picture / Format
 Presets	 Setup / OPT /
 ↔	 TV/Radio /
 FAV	 Shift + Fav / Marker / PC
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 Swap	 Fav / Marker / PC
	 D.Menu / Top
	 Smart / List
 Source	 AV / Input / RDS
 Menu	 Menu / Home
	 Up
	 Left
 OK	 OK
	 Right
	 Down
 C	 Exit / Cancel / Clear
 Disp.	 Display / Media
 Search Mode	 Shift + Red / Netflix /
 Return	 Back / Return





Originale	Sostituto
	CH+ / Page+
	Info / Angle
	Vol+
	CH- / Page-
	Mute / Dimmer
	Vol-
	Rec / Rec Mode
	Pause / Step / Freeze
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	Play / Slow
	Stop / Hold
	>> / Tune+
	Red / Netflix / Search
	Zoom / Size
	Green / APP / Repeat

Originale	Sostituto
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

