 











 







 

 

 

 

 





 

 

 

 

 















 

 

 


 






Originale	Sostituto
 Power	 Power
 Sleep	 Sleep / Timer
 Screen	 Picture / Format
 Presets	 Setup / OPT /
 ↔	 TV/Radio /
 FAV	 Shift + Fav / Marker / PC
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Originale	Sostituto
 9	 9
 EPG	 Guide / EPG / -/-
 0	 0
 Swap	 Fav / Marker / PC
	 D.Menu / Top
	 Smart / List
 Source	 AV / Input / RDS
 Menu	 Menu / Home
	
	
 OK	 OK
	
	
 C	 Exit / Cancel / Clear
 Disp.	 Display / Media
 Search Mode	 Shift + Red / Netflix /
 Return	 Back / Return





Originale	Sostituto
▲	▲ CH+ / Page+
INFO	ANGLE INFO
▲	▲ Vol+
▼	▼ CH- / Page-
⊗	DIMMER MUTE
▼	▼ Vol-
●	REC MODE
⏸	STEP-FREEZE
⏮	PRESET- ⏮
⏭	PRESET+ ⏭
⏪	TUNE- ⏪
▶	SLOW ▶
■	HOLD ■
⏩	TUNE+ ⏩
▲	NETFLIX SEARCH
▲	SIZE ZOOM
▼	APP REPEAT

Originale	Sostituto
● ROOT	YouTube REPEAT A-B
● TITLE	Prime Video RANDOM

