



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Prog		Shift + TV/Radio / Program
	1		1		CH-		CH- / Page-
	2		2		Aspect		Shift + Picture / Format
	3		3		S.Mode		Sound / Title
	4		4		P.Mode		Picture / Format
	5		5		Guide/Title		Guide / EPG / -/--
	6		6		Guide/Title		Shift + Sound / Title
	7		7		Menu		Menu / Home
	8		8		Up		Up
	9		9		Input		AV / Input / RDS
	List		Smart / List		Left		Left
	0		0		OK		OK
	Recall		Back / Return		Right		Right
	Vol+		Vol+		Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer		Down		Down
	CH+		CH+ / Page+		Exit		Exit / Cancel / Clear





Originale	Sostituto
	Info / Angle
	Fav / Marker / PC
	Setup / OPT /
	Shift + Info / Angle
	TV/Radio /
	Audio / Lang I/II
	Text / Goto
	D.Menu / Top
	Shift + Up
	Display / Media
	Zoom / Size
	Rec / Rec Mode
	Shift + Left
	Shift + Exit / Cancel / Clear
	Shift + OK
	Shift + Right
	Shift + Zoom / Size

Originale	Sostituto
	Stop / Hold
	Eject / Surround
	Shift + Down
	Play / Slow
	Pause / Step / Freeze
	I<< / Preset-
	Shift + Stop /
	>>I / Preset+
	<< / Tune-
	>> / Tune+
	Shift + Text /
	Red / Netflix / Search
	Green / APP / Repeat
	Shift + Play /
	Shift + Green / APP /
	Yellow / YouTube / Repeat
	Shift + Yellow / YouTube / Repeat



