 











 

 

 

 
 


 

 


 
 











 



 







 






 














 








Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Prog		Shift + TV/Radio / Program
	1		1		CH-		CH- / Page-
	2		2		Aspect		Shift + Picture / Format
	3		3		S.Mode		Sound / Title
	4		4		P.Mode		Picture / Format
	5		5		Guide/Title		Guide / EPG / -/-
	6		6		Guide/Title		Shift + Sound / Title
	7		7		Menu		Menu / Home
	8		8		Up		Up
	9		9		Input		AV / Input / RDS
	List		Smart / List		Left		Left
	0		0		OK		OK
	Recall		Back / Return		Right		Right
	Vol+		Vol+		Freeze		Shift + Pause / Step /
	Sleep		Sleep / Timer		Down		Down
	CH+		CH+ / Page+		Exit		Exit / Cancel / Clear





Originale	Sostituto
 i	 Info / Angle
 FAV/Setup	 Fav / Marker / PC
 FAV/Setup	 Setup / OPT /
 Tv/RD/Angle	 Shift + Info / Angle
 Tv/RD/Angle	 TV/Radio /
 AD	 Audio / Lang I/I
 Text/Menu	 Text / Goto
 Text/Menu	 D.Menu / Top
 ↑	 Shift + Up
 S	 Display / Media
 Zoom / Rec	 Zoom / Size
 Zoom / Rec	 Rec / Rec Mode
 ←/Cancel	 Shift + Left
 ←/Cancel	 Shift + Exit / Cancel / Clear
 OK/Mix	 Shift + OK
 →/Size	 Shift + Right
 →/Size	 Shift + Zoom / Size



Originale	Sostituto
 Stop	 Stop / Hold
 Eject	 Eject / Surround
 ↓	 Shift + Down
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 I<</Hold	 I<< / Preset-
 I<</Hold	 Shift + Stop /
 >>I/Reveal	 >>I / Preset+
 <</Subpage	 << / Tune-
 >>/Index	 >> / Tune+
 Red/Goto	 Shift + Text /
 Red/Goto	 Red / Netflix / Search
 Green/Slow	 Green / APP / Repeat
 Green/Slow	 Shift + Play /
 Yellow/Repeat	 Shift + Green / APP /
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Shift + Yellow / YouTube / Repeat





Originale

Sostituto

Originale	Sostituto
 Blue/A-B	 Blue / Prime Video / Random

Originale

Sostituto

Originale	Sostituto

