


 







Originale	Sostituto	Originale	Sostituto
 Tv	 TV/Radio /	 Recall	 Shift + Back / Return
 Power	 Power	 Red	 Red / Netflix / Search
 World	 Smart / List	 Green	 Green / APP / Repeat
 [=]/Text	 Text / Goto	 Yellow	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer	 Blue	 Blue / Prime Video / Random
 Music/Movie/Phot	 Sound / Title	 Vol+	 Vol+
 1	 1	 Mute	 Mute / Dimmer
 2	 2	 PR+	 CH+ / Page+
 3	 3	 Vol-	 Vol-
 4	 4	 i	 Info / Angle
 5	 5	 PR-	 CH- / Page-
 6	 6	 Menu	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Q.Menu	 D.Menu / Top
 9	 9	 Left	 Left
 Source/Games	 AV / Input / RDS	 OK	 OK
 0	 0	 Right	 Right





Originale		Sostituto		Originale		Sostituto	
	Back		Back / Return				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	[≡]..		Setup / OPT /				
	Lang		Audio / Lang I/II				
	O/*		Zoom / Size				
	Q./.*		Picture / Format				
	Play		Play / Slow				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	Guide		Guide / EPG / -/--				
	[-O-]		Display / Media				

