



Originale		Sostituto		Originale		Sostituto	
	Tv		TV/Radio /		Recall		Shift + Back / Return
	Power		Power		Red		Red / Netflix / Search
	World		Smart / List		Green		Green / APP / Repeat
	[≡]/Text		Text / Goto		Yellow		Yellow / YouTube / Repeat
	Sleep		Sleep / Timer		Blue		Blue / Prime Video / Random
	Music/Movie/Phot		Sound / Title		Vol+		Vol+
	1		1		Mute		Mute / Dimmer
	2		2		PR+		CH+ / Page+
	3		3		Vol-		Vol-
	4		4		i		Info / Angle
	5		5		PR-		CH- / Page-
	6		6		Menu		Menu / Home
	7		7		Up		Up
	8		8		Q.Menu		D.Menu / Top
	9		9		Left		Left
	Source/Games		AV / Input / RDS		OK		OK
	0		0		Right		Right





Originale		Sostituto		Originale		Sostituto	
	Back		Back / Return				
	Down		Down				
	Exit		Exit / Cancel / Clear				
	[≡]..		Setup / OPT /				
	Lang		Audio / Lang I/II				
	O/*		Zoom / Size				
	Q./.*		Picture / Format				
	Play		Play / Slow				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	Guide		Guide / EPG / -/--				
	[-O-]		Display / Media				

