


 


 
 

 


 



 

 




 

 

 

 
 


 
 

 

 


 
 
 



 
 


 






Originale	Sostituto	Originale	Sostituto
	Tv		TV/Radio /
	Power		Power
	World		Smart / List
	[≡]/Text		Text / Goto
	Sleep		Sleep / Timer
	Music/Movie/Phot		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source/Games		AV / Input / RDS
	0		0

Originale	Sostituto	Originale	Sostituto
	Recall		Shift + Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	i		Info / Angle
	PR-		CH- / Page-
	Menu		Menu / Home
	Up		Up
	Q.Menu		D.Menu / Top
	Left		Left
	OK		OK
	Right		Right





Originale	Sostituto
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 [=]..	 Setup / OPT /
 Lang	 Audio / Lang I/II
 O/*	 Zoom / Size
 Q../*	 Picture / Format
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Guide	 Guide / EPG / -/--
 [-O-]	 Display / Media

