 



 



 



 



 



 
 
 

















 
 
 

 
 


 




 




 
 






 





Originale	Sostituto	Originale	Sostituto
 Power	 Power	 World	 Media
 Source	 AV	 Vol+	 Vol +
 1	 1	 Vol-	 Vol -
 2	 2	 PR+	 Ch +
 3	 3	 PR-	 Ch -
 4	 4	 OK	 Ok
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Back	 Back
 0	 0	 Exit	 Exit
 TV	 TV/R	 i	 Info
 Mute	 Mute	 Guide	 Guide
 Recall	 Pre Ch	 /Music/Photo/Movi	 Dual
 Menu	 Menu	 [=]/Text	 Text
 Q.Menu	 D. Menu	 */o	 Format

Originale	Sostituto	Originale	Sostituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 ▶	 ▶	 ⏸	 ⏸
 ■	 ■	 ⏩	 ⏩
 ⏩	 ⏩	 ⏮	 ⏮
 ⏮	 ⏮	 ⏪	 ⏪
 DISC NAV	 DISC NAV	 SOUND	 SOUND
 LIST	 LIST	 AD	 AD
 PROG	 PROG	 SETTINGS	 SETTINGS
 SEARCH	 SEARCH	 OPT	 OPT
 PICTURE	 PICTURE	 ECO	 ECO
 SLEEP	 SLEEP	 3D	 3D
 TV/R	 TV/R	 FORMAT	 FORMAT
 E-MANUAL	 E-MANUAL	 TIMER	 TIMER
 REPEAT	 REPEAT	 AV	 AV
 ZOOM	 ZOOM		
 TEXT	 TEXT		
 TOP MENU	 TOP MENU	 DISPLAY INFO	 DISPLAY INFO
 MENU	 MENU	 OK	 OK
 CLEAR EXIT	 CLEAR EXIT	 RETURN BACK	 RETURN BACK
 HOME	 HOME	 SMART	 SMART
 VOL +	 VOL +	 APP MEDIA	 APP MEDIA
 VOL -	 VOL -	 CH +	 CH +
 1	 1	 CH -	 CH -
 2	 2	 RETURN BACK	 RETURN BACK
 3	 3	 CLEAR EXIT	 CLEAR EXIT
 4	 4	 DISPLAY INFO	 DISPLAY INFO
 5	 5	 GUIDE	 GUIDE
 6	 6	 DUAL	 DUAL
 7	 7	 REPEAT	 REPEAT
 8	 8	 TEXT	 TEXT
 9	 9	 PICTURE FORMAT	 PICTURE FORMAT
 0	 0		
 GUIDE	 GUIDE		
 A	 A		
 B	 B		
 C	 C		
 D	 D		
 Mandis SHOP	 Mandis SHOP		
 www.mandis.tv	 www.mandis.tv		



