



Originale	Sostituto
 Power	 Power
 Netflix	 Shift + Red / Netflix /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV	 TV/Radio /
 0	 0
 Recall	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 PR+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 i	 Info / Angle
 PR-	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 EXit	 Exit / Cancel / Clear
 World	 Smart / List
 Camera/Music/Ph	 Display / Media
 Guide	 Guide / EPG / -/-
 */o	 Picture / Format
 Games	 AV / Input / RDS





	Originale	Sostituto	Originale	Sostituto
	 [=]/Text	 GOTO TEXT Text / Goto		
	 Red	 NETFLIX SEARCH Red / Netflix / Search		
	 Green	 APP REPEAT Green / APP / Repeat		
	 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
	 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
	 LANG. Lang	 LANG I/II AUDIO Audio / Lang I/II		
	 [=]..	 EQ SUBTITLE Subtitle / EQ		
	 [-O-]	 SIZE ZOOM Zoom / Size		
	 <<<	 TUNE- <<< / Tune-		
		 STEP-FREEZE Pause / Step / Freeze		
	 >>>	 TUNE+ >>> / Tune+		
	 Rec	 REC MODE Rec / Rec Mode		
	 ▶	 SLOW ▶ Play / Slow		
	 ■	 HOLD ■ Stop / Hold		

