

 

 









 

 









 

 






 


 
 




Originale	Sostituto
	 Power
	 Mute / Dimmer
	 Shift + Audio / Lang I/II
	 Shift + Picture / Format
	 Picture / Format
	 Sound / Title
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Shift + Guide / EPG / -/-
	 0

Originale	Sostituto
	 Back / Return
	 Display / Media
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Sleep / Timer
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Exit / Cancel / Clear





Originale	Sostituto
CH+ CH+ / Page+	
Subtitle Subtitle / EQ	
Vol+ Vol+	
CH- CH- / Page-	
T.Shift Setup / OPT /	
Vol- Vol-	
Play/Pause/Hold Play / Slow	
Play/Pause/Hold Shift + Stop /	
<</Reveal << / Tune-	
>>/Size Zoom / Size	
>>/Size >> / Tune+	
Stop/Index Stop / Hold	
I<< I<< / Preset-	
S.Page/>>I >>I / Preset+	
Text Text / Goto	
FAV Fav / Marker / PC	
Audio Audio / Lang I/II	

Originale	Sostituto
DTV DTV	Smart / List
EPG EPG	Guide / EPG / -/-
Tv/Radio TV/Radio /	

