


 
 


 
 
 


 
 

 
 
 






 

 
 


 
 






Originale	Sostituto
 Power	 Power
 iPod	 Shift + 1
 Tv	 Shift + 2
 AUX	 Shift + 3
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Tuner	 Shift + 4
 Disc/USB/NET	 Shift + 5
 Red/Program	 Red
 Green/Marker	 Green
 Yelow/Digest	 Yellow

Originale	Sostituto
 Blue/Zoom	 Blue
 Sleep	 Sleep
 Timer	 AV
 Surround	 Dual
 Mute	 Mute
 Clear	 Exit
 Search	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0



