


 
 


 
 
 


 
 

 
 
 






 

 
 


 
 






Originale	Sostituto
 Power	 Power
 iPod	 Shift + 1
 Tv	 Shift + 2
 AUX	 Shift + 3
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Tuner	 Shift + 4
 Disc/USB/NET	 Shift + 5
 Red/Program	 Red
 Green/Marker	 Green
 Yelow/Digest	 Yellow

Originale	Sostituto
 Blue/Zoom	 Blue
 Sleep	 Sleep
 Timer	 AV
 Surround	 Dual
 Mute	 Mute
 Clear	 Exit
 Search	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Originale	Sostituto
Option	Options
Top Menu	Menu
Open/Close	Eject
Setup	D. Menu
Pop Up Menu	List
Home	Smart
Return	Back
On Screen	Shift + Options
Subtitle	Subt
Audio	Shift + Text
Repeat	Text
>>I/Preset >	>>I
I<</< Preset	I<<
>>/Tuning>>	>>
<</<<Tuning	<<
I>>	Ch +
<<I	Ch -

Originale	Sostituto
Vol+	Vol +
Vol-	Vol -
PIP	Format
Memory	Rec
A-B	Shift + Play
Status	Info
Dimmer	Guide
Shuffle	Pre Ch
Display	Shift + Info
TP	3D

