



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol-		Vol-
	TV		TV/Radio /		Source		AV / Input / RDS
	1		1		PR-		CH- / Page-
	2		2		CH List		Smart / List
	3		3		Menu		Menu / Home
	4		4		FAV CH		Fav / Marker / PC
	5		5		Tools		Setup / OPT /
	6		6		Return		Shift + Back / Return
	7		7		Up		Up
	8		8		Left		Left
	9		9		Enter		OK
	[]		Display / Media		Right		Right
	0		0		Info		Info / Angle
	PRE-CH		Back / Return		Down		Down
	Vol+		Vol+		Exit		Exit / Cancel / Clear
	Mute		Mute / Dimmer		Red		Red / Netflix / Search
	PR+		CH+ / Page+		Green		Green / APP / Repeat





Originale	Sostituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
TTX/MIX	Text / Goto
SRS	Sound / Title
P.Size	Zoom / Size
Dual/I/II	Audio / Lang I/II
Guide	Guide / EPG / -/--
Subt	Subtitle / EQ
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold

Originale	Sostituto

